





**Schurter**



**SCHURTER**  
ELECTRONIC COMPONENTS


## CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S

Hlutanúmer:	CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S
Framleiðandi / Vörumerki:	Schurter
Vörulýsing	SWITCH PUSHBUTTON SPST 100MA 42V
Gagnablöð:	 CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S.pdf
RoHS Staða	 Leiða frjáls / RoHS samhæft
Skip frá	Hong Kong
Sending vegur	DHL/Fedex/TNT/UPS/EMS

BEIÐNI UM TILVITNUN

Mynd getur verið fulltrúi. Sjá upplýsingar um upplýsingar um vörur.













### Upplýsingar um CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S

HLUTANÚMER	CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S
FRAMLEIÐANDI	Schurter
LÝSING	SWITCH PUSHBUTTON SPST 100MA 42V
LEIÐA FRJÁLS STAÐA / ROHS STAÐA	Leiða frjáls / RoHS samhæft
GÖGN	 CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S.pdf
SPENNAHLUTFALL - DC	60V
SPENNA EINKUNN - AC	42V
GERÐ	Capacitive, Illuminated
UPPSAGNARSTÍLL	Wire Leads
ROFI VIRKA	Off-On
RÖÐ	CPS
PALLBORDSMET	Circular - 19.10mm Dia
PÖKKUN	Bulk
VINNUHITASTIG	-40°C ~ 60°C
UPPSETNINGARTEGUND	Panel Mount, Front
VÖKTUNARNÆMISSTIG (MSL)	1 (Unlimited)
VÉLÆN LÍF	-
LEIÐA FRJÁLS STAÐA / ROHS STAÐA	Lead free / RoHS Compliant
INNÁRÁRVÖRN	IP67 - Dust Tight, Waterproof
UPPLJÓS SPENNA (NAFNVERÐ)	5 ~ 28 VDC
LÝSING LÝSINGAR, LIT.	LED, Yellow/Cyan
LÖGUN	Ceramic Actuator, C Symbol
RAFMAGNLÍF	-
NÁKVÆM LÝSING	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
NÚVERANDI EINKUNN	100mA (AC/DC)
LITUR - STÝRISBÚNAÐUR / LOKI	Clear (White Filter/Diffuser)
HRINGRÁS	SPST
VIRKJUNARGERÐ	Round, Button, Flush

### Svipaðir merkingar

Schurter CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S	CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S dreifingaraðili	CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S birgir
CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S verð	CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S Myndir	CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S mynd
CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S PDF gagnablað	CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S niðurhal gagnablað	CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S gagnablað
CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S lager	Kauptu CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S	Kauptu Schurter CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S
Schurter CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S	Schurter birgir	Schurter dreifingaraðili
Schurter CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S	Schurter Inc. CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1003-S	

### skyldar vörur

 <p><b>CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1007-S</b></p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>	 <p><b>CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1005-S</b></p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>
 <p><b>CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W0000-S</b></p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>	 <p><b>CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1008-S</b></p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>
 <p><b>CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1009-S</b></p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>	 <p><b>CPS19-LA00A10-SNCCWTNF-AI0YBVAR-W1076-S</b></p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>
 <p><b>CPS19-LA00A10-SNCCWTNF-AI0YBVAR-W1075-S</b></p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>	 <p><b>CPS19-LA00A10-SNCCWTNF-AI0YBVAR-W1077-S</b></p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>
 <p><b>CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1001-S</b></p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>	 <p><b>CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1002-S</b></p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>
 <p><b>CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1006-S</b></p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>	 <p><b>CPS19-LA00A10-SNCCWTNF-AI0YCVAR-W1004-S</b></p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>