






CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S

| | |
|---------------------------|---|
| Hlutanúmer: | CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S |
| Framleiðandi / Vörumerki: | Schurter |
| Vörulýsing | SWITCH PUSHBUTTON SPST 100MA 42V |
| Gagnablað: |  CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S.pdf |
| RoHS Staða |  Leiða frjáls / RoHS samhæft |
| Skip frá | Hong Kong |
| Sending vegur | DHL/Fedex/TNT/UPS/EMS |

BEIÐNI UM TILVITNUN

Mynd getur verið fulltrúi. Sjá upplýsingar um upplýsingar um vörur.

Upplýsingar um CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S

| | |
|---------------------------------|---|
| HLUTANÚMER | CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S |
| FRAMLEIÐANDI | Schurter |
| LÝSING | SWITCH PUSHBUTTON SPST 100MA 42V |
| LEIDA FRJÁLS STAÐA / ROHS STAÐA | Leiða frjáls / RoHS samhæft |
| GÖGN |  CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S.pdf |
| SPENNAHLUTFALL - DC | 60V |
| SPENNA EINKUNN - AC | 42V |
| GERÐ | Capacitive, Illuminated |
| UPPSAGNARSTÍLL | Wire Leads |
| ROFI VIRKA | Off-On |
| RÖÐ | CPS |
| PALLBORDSMET | Circular - 19.10mm Dia |
| PÖKKUN | Bulk |
| VINNUHITASTIG | -40°C ~ 60°C |
| UPPSETNINGARTEGUND | Panel Mount, Front |
| VÖKTUNARNÆMISSTIG (MSL) | 1 (Unlimited) |
| VÉLÆN LÍF | - |
| LEIDA FRJÁLS STAÐA / ROHS STAÐA | Lead free / RoHS Compliant |
| INNÁRÁRVÖRN | IP67 - Dust Tight, Waterproof |
| UPPLJÓÐ SPENNA (NAFNVERÐ) | 5 ~ 28 VDC |
| LÝSING LÝSINGAR, LIT. | LED, Yellow/Cyan |
| LÖGUN | Ceramic Actuator, Finger Guide, LOCK Symbol |
| RAFMAGNSLÍF | - |
| NÁKVÆM LÝSING | Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front |
| NÚVERANDI EINKUNN | 100mA (AC/DC) |
| LITUR - STÝRISBÚNAÐUR / LOKI | Clear (White Filter/Diffuser) |
| HRINGRÁS | SPST |
| VIRKJUNARGERÐ | Round, Button, Flush |

Svipaðir merkingar

| | | |
|---|--|---|
| Schurter CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S | CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S dreifingaraðili | CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S birgir |
| CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S verð | CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S Myndir | CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S mynd |
| CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S PDF gagnablað | CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S niðurhal gagnablað | CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S gagnablað |
| CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S lager | Kauptu CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S | Kauptu Schurter CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S |
| Schurter CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S | Schurter birgir | Schurter dreifingaraðili |
| Schurter CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S | Schurter Inc. CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1056-S | |

skyldar vörur

| | |
|---|--|
|  <p>CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1058-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1051-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1055-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1050-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1054-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1053-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1062-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1052-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1059-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1061-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1057-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCCWTWF-AI0YCVAR-W1060-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p>RFQ</p> |