



**SCHURTER**
ELECTRONIC COMPONENTS

Schurter


**SCHURTER**
ELECTRONIC COMPONENTS

Hlutanúmer:	CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S
Framleiðandi / Vörumerki:	Schurter
Vörulýsing	SWITCH PUSHBUTTON SPST 100MA 42V
Gagnablöð:	 CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S.pdf
RoHS Staða	 Leiða frjáls / RoHS samhæft
Skip frá	Hong Kong
Sending vegur	DHL/Fedex/TNT/UPS/EMS

BEIÐNI UM TILVITNUN

Mynd getur verið fulltrúi. Sjá upplýsingar um upplýsingar um vörur.











Upplýsingar um CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S

HLUTANÚMER	CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S
FRAMLEIÐANDI	Schurter
LÝSING	SWITCH PUSHBUTTON SPST 100MA 42V
LEIÐA FRJÁLS STAÐA / ROHS STAÐA	Leiða frjáls / RoHS samhæft
GÖGN	 CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S.pdf
SPENNAHLUTFALL - DC	60V
SPENNA EINKUNN - AC	42V
GERÐ	Capacitive, Illuminated
UPPSAGNARSTÍLL	Wire Leads
ROFI VIRKA	Off-On
RÖÐ	CPS
PALLBORDSMET	Circular - 19.10mm Dia
PÖKKUN	Bulk
VINNUHITASTIG	-40°C ~ 60°C
UPPSETNINGARTEGUND	Panel Mount, Front
VÖKTUNARN/EMISSTIG (MSL)	1 (Unlimited)
VÉLRÆN LÍF	-
LEIÐA FRJÁLS STAÐA / ROHS STAÐA	Lead free / RoHS Compliant
INN RÁSARVÖRN	IP67 - Dust Tight, Waterproof
UPPLJÓÐ SPENNA (NAFNVERÐ)	5 ~ 28 VDC
LÝSING LÝSINGAR, LIT.	LED, Cyan/Green
LÖGUN	Finger Guide, S Symbol
RAFMAGNSLÍF	-
NÁKVÆM LÝSING	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
NÚVERANDI EINKUNN	100mA (AC/DC)
LITUR - STÝRISBÚNAÐUR / LOKI	Silver
HRINGRÁS	SPST
VIRKJUNARGERÐ	Round, Button, Flush

Svipaðir merkingar

Schurter CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S	CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S dreifingaraðili	CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S birgir
CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S verð	CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S Myndir	CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S mynd
CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S PDF gagnablað	CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S niðurhal gagnablað	CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S gagnablað
CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S lager	Kauptu CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S	Kauptu Schurter CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S
Schurter CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S	Schurter birgir	Schurter dreifingaraðili
Schurter CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S	Schurter Inc. CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S	

skyldar vörur

<div>SCHURTER ELECTRONIC COMPONENTS</div> <div>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1018-S</div> <div>Framleiðendur: Schurter</div> <div>Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V</div> <div>Á lager: Out stock</div> <div>RFQ</div>	<div>SCHURTER ELECTRONIC COMPONENTS</div> <div>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1023-S</div> <div>Framleiðendur: Schurter</div> <div>Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V</div> <div>Á lager: Out stock</div> <div>RFQ</div>
<div>SCHURTER ELECTRONIC COMPONENTS</div> <div>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1020-S</div> <div>Framleiðendur: Schurter</div> <div>Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V</div> <div>Á lager: Out stock</div> <div>RFQ</div>	<div>SCHURTER ELECTRONIC COMPONENTS</div> <div>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1014-S</div> <div>Framleiðendur: Schurter</div> <div>Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V</div> <div>Á lager: Out stock</div> <div>RFQ</div>
<div>SCHURTER ELECTRONIC COMPONENTS</div> <div>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1016-S</div> <div>Framleiðendur: Schurter</div> <div>Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V</div> <div>Á lager: Out stock</div> <div>RFQ</div>	<div>SCHURTER ELECTRONIC COMPONENTS</div> <div>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1025-S</div> <div>Framleiðendur: Schurter</div> <div>Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V</div> <div>Á lager: Out stock</div> <div>RFQ</div>
<div>SCHURTER ELECTRONIC COMPONENTS</div> <div>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1013-S</div> <div>Framleiðendur: Schurter</div> <div>Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V</div> <div>Á lager: Out stock</div> <div>RFQ</div>	<div>SCHURTER ELECTRONIC COMPONENTS</div> <div>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1022-S</div> <div>Framleiðendur: Schurter</div> <div>Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V</div> <div>Á lager: Out stock</div> <div>RFQ</div>
<div>SCHURTER ELECTRONIC COMPONENTS</div> <div>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1015-S</div> <div>Framleiðendur: Schurter</div> <div>Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V</div> <div>Á lager: Out stock</div> <div>RFQ</div>	<div>SCHURTER ELECTRONIC COMPONENTS</div> <div>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1021-S</div> <div>Framleiðendur: Schurter</div> <div>Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V</div> <div>Á lager: Out stock</div> <div>RFQ</div>
<div>SCHURTER ELECTRONIC COMPONENTS</div> <div>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1017-S</div> <div>Framleiðendur: Schurter</div> <div>Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V</div> <div>Á lager: Out stock</div> <div>RFQ</div>	<div>SCHURTER ELECTRONIC COMPONENTS</div> <div>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S</div> <div>Framleiðendur: Schurter</div> <div>Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V</div> <div>Á lager: Out stock</div> <div>RFQ</div>