





Schurter




CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S

Hlutanúmer:	CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S
Framleiðandi / Vörumerki:	Schurter
Vörulýsing	SWITCH PUSHBUTTON SPST 100MA 42V
Gagnablöð:	 CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S.pdf
RoHS Staða	 Leiða frjáls / RoHS samhæft
Skip frá	Hong Kong
Sending vegur	DHL/Fedex/TNT/UPS/EMS

BEIÐNI UM TILVITNUN

Mynd getur verið fulltrúi. Sjá upplýsingar um upplýsingar um vörur.













Upplýsingar um CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S

HLUTANÚMER	CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S
FRAMLEIÐANDI	Schurter
LÝSING	SWITCH PUSHBUTTON SPST 100MA 42V
LEIDA FRJÁLS STAÐA / ROHS STAÐA	Leiða frjáls / RoHS samhæft
GÖGN	 CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S.pdf
SPENNAHLUTFALL - DC	60V
SPENNA EINKUNN - AC	42V
GERÐ	Capacitive, Illuminated
UPPSAGNARSTÍLL	Wire Leads
ROFI VIRKA	Off-On
RÖÐ	CPS
PALLBORDSMET	Circular - 19.10mm Dia
PÖKKUN	Bulk
VINNUHITASTIG	-40°C ~ 60°C
UPPSETNINGARTEGUND	Panel Mount, Front
VÖKTUNARNÆMISSTIG (MSL)	1 (Unlimited)
VÉLÆN LÍF	-
LEIDA FRJÁLS STAÐA / ROHS STAÐA	Lead free / RoHS Compliant
INNÁRÁRVÖRN	IP67 - Dust Tight, Waterproof
UPPLJÓÐ SPENNA (NAFNVERÐ)	5 ~ 28 VDC
LÝSING LÝSINGAR, LIT.	LED, Yellow/Cyan
LÖGUN	Finger Guide, RESET Symbol
RAFMAGNSLÍF	-
NÁKVÆM LÝSING	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
NÚVERANDI EINKUNN	100mA (AC/DC)
LITUR - STÝRISBÚNAÐUR / LOKI	Silver
HRINGRÁS	SPST
VIRKJUNARGERÐ	Round, Button, Flush

Svipaðir merkingar

Schurter CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S	CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S dreifingaraðili	CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S birgir
CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S verð	CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S Myndir	CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S mynd
CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S PDF gagnablað	CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S niðurhal gagnablað	CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S gagnablað
CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S lager	Kauptu CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S	Kauptu Schurter CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S
Schurter CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S	Schurter birgir	Schurter dreifingaraðili
Schurter CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S	Schurter Inc. CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S	

skyldar vörur

 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1076-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 2px;">RFQ</p>	 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1074-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 2px;">RFQ</p>
 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1069-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 2px;">RFQ</p>	 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1067-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 2px;">RFQ</p>
 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1075-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 2px;">RFQ</p>	 <p>CPS19-LA00A10-SNCSNCWF-RI0YGVAR-W0000-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 2px;">RFQ</p>
 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1071-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 2px;">RFQ</p>	 <p>CPS19-LA00A10-SNCSNCWF-RI0YGVAR-W1001-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 2px;">RFQ</p>
 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1068-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 2px;">RFQ</p>	 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1070-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 2px;">RFQ</p>
 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1077-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 2px;">RFQ</p>	 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1072-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 2px;">RFQ</p>