




Schurter




CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S

Hlutanúmer:	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S
Framleiðandi / Vörumerki:	Schurter
Vörulýsing	SWITCH PUSHBUTTON SPST 100MA 42V
Gagnablað:	 CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S.pdf
RoHS Staða	 Leiða frjáls / RoHS samhæft
Skip frá	Hong Kong
Sending vegur	DHL/Fedex/TNT/UPS/EMS

BEIÐNI UM TILVITNUN

Mynd getur verið fulltrúi. Sjá upplýsingar um upplýsingar um vörur.

Upplýsingar um CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S

HLUTANÚMER	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S
FRAMLEIÐANDI	Schurter
LÝSING	SWITCH PUSHBUTTON SPST 100MA 42V
LEIDA FRJÁLS STAÐA / ROHS STAÐA	Leiða frjáls / RoHS samhæft
GÖGN	 CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S.pdf
SPENNAHLUTFALL - DC	60V
SPENNA EINKUNN - AC	42V
GERÐ	Capacitive, Illuminated
UPPSAGNARSTÍLL	Wire Leads
ROFI VIRKA	Off-On
RÖÐ	CPS
PALLBORDSMET	Circular - 16.10mm Dia
PÖKKUN	Bulk
VINNUHITASTIG	-40°C ~ 60°C
UPPSETNINGARTEGUND	Panel Mount, Front
VÖKTUNARNÆMISSTIG (MSL)	1 (Unlimited)
VÉLÆN LÍF	-
LEIDA FRJÁLS STAÐA / ROHS STAÐA	Lead free / RoHS Compliant
INNÁRÁRVÖRN	IP67 - Dust Tight, Waterproof
UPPLJÓÐ SPENNA (NAFNVERÐ)	5 ~ 28 VDC
LÝSING LÝSINGAR, LIT.	LED, Yellow/Green
LÖGUN	0 Symbol
RAFMAGNSLÍF	-
NÁKVÆM LÝSING	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
NÚVERANDI EINKUNN	100mA (AC/DC)
LITUR - STÝRISBÚNAÐUR / LOKI	Silver
HRINGRÁS	SPST
VIRKJUNARGERÐ	Round, Button, Flush

Svipaðir merkingar

Schurter CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S dreifingaraðili	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S birgir
CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S verð	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S Myndir	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S mynd
CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S PDF gagnablað	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S niðurhal gagnablað	CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S gagnablað
CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S lager	Kauptu CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S	Kauptu Schurter CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S
Schurter CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S	Schurter birgir	Schurter dreifingaraðili
Schurter CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S	Schurter Inc. CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1027-S	

skyldar vörur

 <p>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1021-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>	 <p>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1025-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>
 <p>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1023-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>	 <p>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1033-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>
 <p>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1029-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>	 <p>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1030-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>
 <p>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1026-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>	 <p>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1032-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>
 <p>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1031-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>	 <p>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1024-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>
 <p>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1028-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>	 <p>CPS16-LA00A10-SNCSNCF-RI0YGVAR-W1022-S</p> <p>Framleiðendur: Schurter Lýsing: SWITCH PUSHBUTTON SPST 100MA 42V Á lager: Out stock</p> <p style="text-align: center; background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">RFQ</p>